


Services Nurse Call, Surgery Call, Warden Call, Staff Safety, Access Control, CCTV

Intercall 600	1
Intercall 700	1


SRP Slave Reset / Present Point.

Slave Reset / Present Points are normally located by the door of a bedroom to enable staff to reset the call point and to register as staff present away from the patient call point. The unit is used in conjunction with the L732 Call Point, which has additional terminals for this purpose.




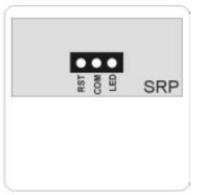

Above: Front panel and pcb detail of the SRP Slave Reset/Present Point

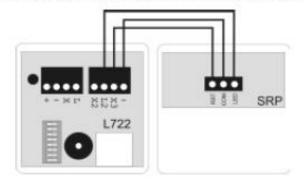

Above: SRP Connects to L722 (Mk2) Call point using X2 and L2 terminals

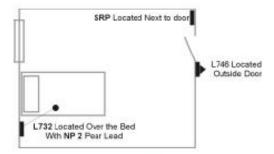

Above: Typical Room Layout showing L732 Call Point, SRP Remote/Preset Unit and L746 Overdoor Light.

Reset Button: Performs same functions as reset button on L732 but in remote location.

LED: Green Led operates with green re-assurance LED in L732 Call Point

Installation: Flush or surface mount in standard 'single size' electrical backbox.

Size & Weights: 80 x 80 x 40 mm, 60g