


Services Nurse Call, Surgery Call, Warden Call, Staff Safety, Access Control, CCTV

Intercall 600	617 / 717
Intercall 700	717

System Components.

L617 (600 Series only) & L717 (600 & 700 Series) Intelligent Power Supply Unit.

The L617 is to be used with Intercall 600 systems only. The L717 may be used with Intercall 700 & Intercall 600 systems provided all network devices were manufactured after August 2003. The unit provides power and data signals for the network devices. The Power supply stores the text programming information & when this is customised, it will need to be downloaded to any new display, call logger or pager interface installed on the system at a later date. When using with an Intercall 700 with Intercom, the (A) and (B) cables do not connect to this unit.

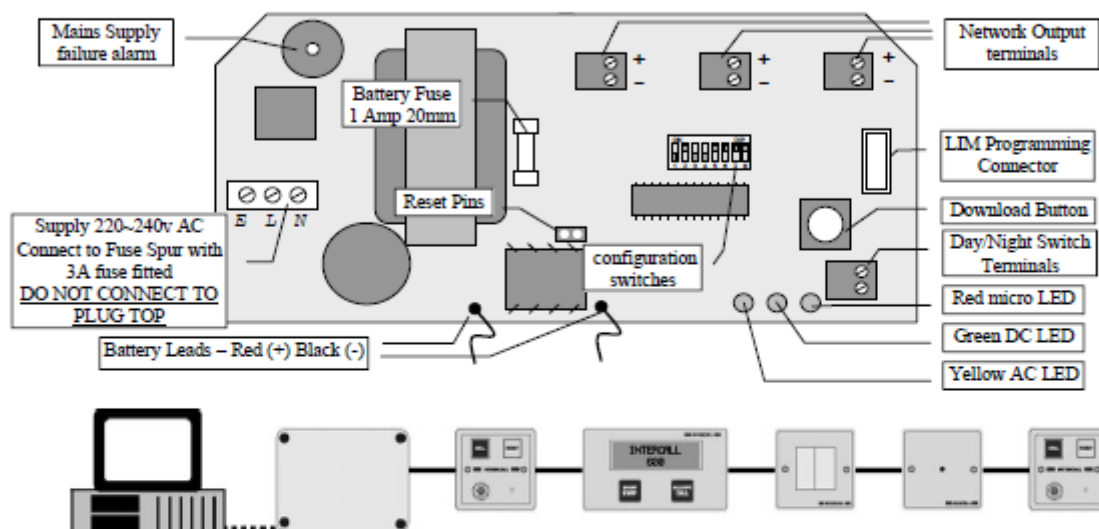

Mains Terminals:	220-240VAC @ 20W (Max)
Battery Leads:	12v, 1.9/2.1/2.4 Ah sealed lead acid battery. OBSERVE POLARITY!
Output Terminals (+-):	Three pairs provided for convenience, connect to network devices.
LIM Connector:	Connects to LIM for system text programming. (See page 48)
Configuration Switches:	See page 68 for a complete list of DIL switch settings.
Day/Night Terminals:	By connecting a switch between these two terminals you can switch the between the two volume levels set-up on the displays. (See Pages 32)
Download Button:	Press & hold for 10 seconds, then release, to download text to LCD displays. THE BATTERY MUST BE CONNECTED WHEN DOWNLOADING
Reset Pins:	If shorted, resets the power supply and cancels all calls active on the system.
Mains Failure Alarm:	Beeps every 3 seconds when no mains supply is present.
Red Led:	Flashes, indicating unit is operating correctly.
Yellow Led:	Indicates AC is present and transformer is operating.
Green Led:	Indicates 12volt DC supply is present and fuse is intact
Onboard Fuse:	1Amp 20mm protection for power supply & battery.
Installation:	Self Contained Surface Mounted Case. (See Below)
Size & Weights:	225 x 180 x 90 mm, 1400g